



**PELI**  
**BIO THERMAL™**



**Crēdo**  
**Cube™**



# DRY ICE


## SUPERIOR DRY ICE PROTECTION IN A CONVENIENT MID-SIZE CONTAINER

The Crēdo Cube™ Dry Ice is a passive shipper qualified to hold deep frozen (-60°C and below) medical materials at a safe temperature in excess of five days. VIP Insulation reduces the requirement to re-ice during transit and can extend duration over traditional EPS Dry Ice shippers. Crēdo Cube™ Dry Ice is reusable, which gives excellent ROI and can help with your company's sustainability goals.

## CRÉDO CUBE™ DRY ICE



**DURATION**  
140 + HOURS



**TEMPERATURE**  
DRY ICE  
(-60°C and below)



**VOLUME**  
1.8L - 27L

## WHY CHOOSE CRÉDO CUBE™ DRY ICE?

- Reusable, durable and long lasting construction
- Performance in excess of 140 hours
- Features VIP (Vacuum Insulation Panels) for longer durations
- **4 sizes available:** 4L, 12L, 28L, 56L
- **For payloads:** 1.8L, 5L, 17L, 27L
- Qualified to ISTA7D Profiles
- Part of the market-leading Crēdo Cube™ product family




# CRĒDO CUBE™ DRY ICE PRODUCT SPECIFICATION

	Payload Size	Exterior Dimensions WxDxH		Interior Dimensions WxDxH		Insulation	Outer Material	Tare Weight		Payload Box	
		mm	inches	mm	inches			kg	lbs	mm	inches
(-60°C and below)	1.8L	318 x 267 x 279	12.5 x 10.5 x 10.9	150 x 150 x 150	5.9 x 5.9 x 5.9	Single Wall VIP	White Plastic	2.5	5.5	112 x 110 x 150	4.4 x 4.3 x 5.9
	5L	381 x 343 x 349	15 x 13.5 x 13.75	226 x 226 x 226	8.9 x 8.9 x 8.9	Single Wall VIP	White Plastic	4.7	10.3	190.5 x 190.5 x 139.7	7.5 x 7.5 x 5.5
	17L	457 x 419 x 432	18 x 16.5 x 17	305 x 305 x 305	12 x 12 x 12	Single Wall VIP	White Plastic	7.4	16.3	266.7 x 266.7 x 241.3	10.5 x 10.5 x 9.5
	27L	540 x 495 x 502	21.2 x 19.5 x 19.75	381 x 381 x 381	15 x 15 x 15	Single Wall VIP	White Plastic	8.8	19.4	301 x 301 x 292	11.9 x 11.9 x 11.5

Internal / external dimensions may vary subject to approved tolerances.

## ADDITIONAL DATA

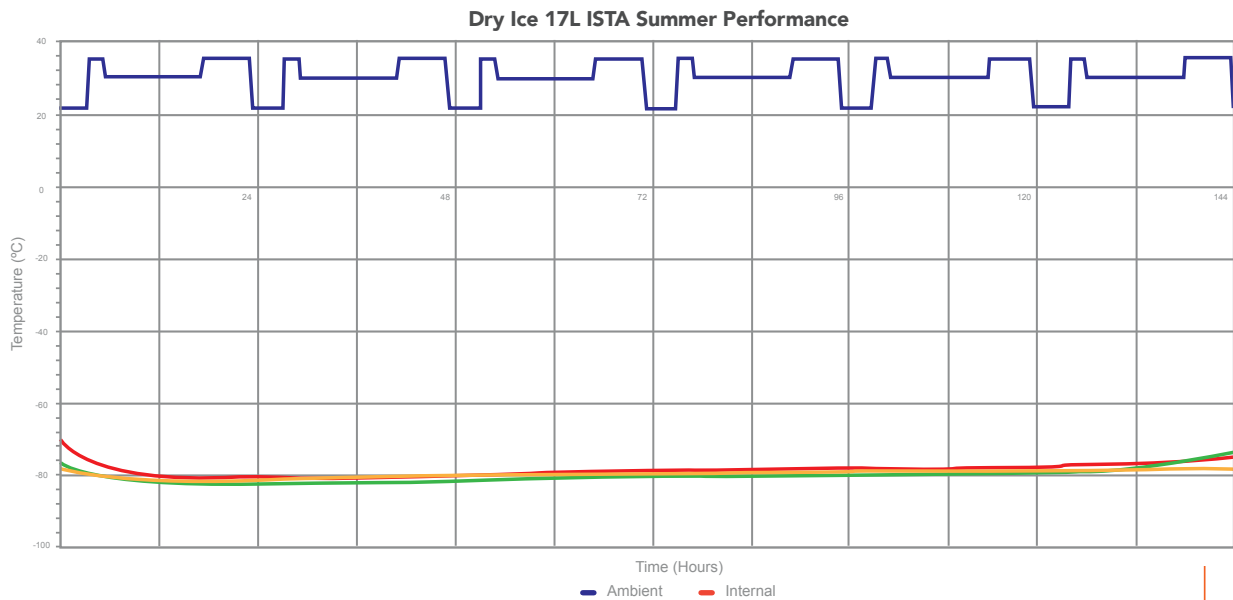

FOR MORE INFORMATION ABOUT PELI BIOTHERMAL PRODUCTS, PLEASE CONTACT:

EMEA OFFICE - [INFOEMEA@PELIBIOTHERMAL.COM](mailto:INFOEMEA@PELIBIOTHERMAL.COM) T: +44 (0)1525 243 770

AMERICAS OFFICE - [INFOAMERICAS@PELIBIOTHERMAL.COM](mailto:INFOAMERICAS@PELIBIOTHERMAL.COM) T: +1(763) 412-4800 TOLL FREE US: T: +(877) 537-9800

ASIA OFFICE - [INFOASIA@PELIBIOTHERMAL.COM](mailto:INFOASIA@PELIBIOTHERMAL.COM) T: +65 6681 0095

[PELIBIOTHERMAL.COM](http://PELIBIOTHERMAL.COM)

ISO17025, ISO9001-2008 Accredited

Golden Hour™, TIC™, Crêdo™, Crêdo Cube™, Crêdo ProEnvision™, Crêdo Xtreme™, Crêdo Duracube™, Crêdo ProMed™, Sherpa Systems™, CoolGuard™ and CoolPall™ are registered trademarks of Pelican Products Inc., its subsidiaries and / or affiliates



©2022 Peli BioThermal Ltd all rights reserved